 


## Set Synapse Defaults

Scan the bar code below to set defaults for the parameters in this guide. See *Set Synapse Defaults (Advanced)* on page 17 for advanced Synapse Default options.



SET SYNAPSE PC WEDGE DEFAULTS



**IBM PC/AT  
IBM PS/2-50, 55SX, 60, 70, 80  
(DEFAULT)**